

MINING

# **Pipe spreaders**

#### **TYPE RMR-V25**

Certificate issued by the Central Mining Institute in Katowice Safety mark No. B/1295/IV/2014

#### DESCRIPTION

The pipe spreaders consist of the following elements:

- connecting tube (connector)
- holder
- U bar or hook bolts

The connector, which is the main spacing element, is manufactured in the size  $\emptyset$ 42.4 x 3.2 mm.

Its length depends on the arch spacing. Both connector ends are appropriately bevelled and formed into oval shape to achieve better adherence to the holder. Assembly holes of ø22 mm make it possible to join the connector with V25 section.

The holder is made of a flat bar of 8 x 40. The middle part of the holder tightly adheres to the arch section and the arms fit the connector.

U bar and hook bolts are made of plain bar with M20 thread.

Holders, U bars, hook bolts, nuts and washers are elements used for fastening the spreader to the V25 arches.

# **APPLICATION AND USE**

Arch tube spreaders of type RMR V25 are used to stabilise and connect V25 roof support arches.





## **ADVANTAGES**

- The spreader's design ensures appropriate fixture you only need to pay attention to tightening the bolts
- Easier to assemble than the spreaders typically used
- Ideal for slope excavation areas
- High axial strength resistance
- RMR-V25 spreaders comply with the PN-G-15000-7:1996 standard: "Supporting roadways with channel section arches"



## **TECHNICAL DATA**

Parameter	Details
V25 Spacer tube diameter	Ø 42.4 x 2.9 mm ; Ø 42.4 x 3.2 mm
Arch spacing	500 ; 750 ; 1000 ; 1200 ; 1250 ; 1500 mm
U bar or hook bolt thread	M20 mm

## **APPLICATION METHOD**

To assemble the RMR-V25 arch spreader put on first the M20 hook bolts or M20 U bar and then the holder. At the end, the connecting tube should be fixed with M20 nuts.

It is important to tighten the nuts fastening the spreader to the arch, inspect the structure regularly and tighten the connections as well as the arch locks.

The number of spreaders depends on the size of the support arch. The spreader should be at least 0.3 m away from the beam ends.

## PACKAGING AND TRANSPORTATION

Packaging and transport on pallets or in containers, depending on the quantity ordered.

## **APPROVALS AND CERTIFICATES**

 RMR-V25 arch tube spreader has a Certificate allowing the product to be marked with the safety mark No.
B/1295/IV/2014 issued by the Central Mining Institute in Katowice.

#### DISCLAIMER

The Minova Logo is a registered trademark.

Copyright © 2019 Minova. All rights reserved.

All information contained in this document is provided for informational purposes only and is subject to change without notice. Since Minova cannot anticipate or control the conditions under which this information and its products may be used, each user should review the information in the specific context of the intended application. To the maximum extent permitted by law, Minova specifically disclaims all warranties expressed or implied in law, including accuracy, noninfringement, and implied warranties of merchantability or fitness for a particular purpose. Minova specifically disclaims, and will not be responsible for, any liability or damages resulting from the use or reliance upon the information in this document.

#### LIST OF REPRESENTATIVES

- AUSTRIA: Minova MAI GmbH
- CZECH REPUBLIC: Minova Bohemia s.r.o.
- FRANCE / BELGIUM: Sales office Minova France / Belgium
- GERMANY: Minova CarboTech GmbH
- ITALY: Minova CarboTech GmbH Italy branch
- KAZAKHSTAN: Minova Kazakhstan LLP
- POLAND: Minova Ekochem S.A.; Minova Arnall Sp. z o.o.; Minova Ksante Sp. z o.o.
- RUSSIA: ZAO "Carbo-ZAKK"
- SLOVAKIA: Minova Bohemia s. r. o., organizačná zložka
- SOUTH AFRICA: Minova Africa (Pty) Ltd.
- SPAIN: Minova Codiv S.L.U.
- SWEDEN / NORWAY: Minova Nordic AB
- UNITED KINGDOM: Minova Weldgrip Ltd.; Minova International Ltd.
- APAC: Minova Australia Pty Ltd.
- AMERICAS: Minova USA Inc.

#### **CUSTOMER SERVICE**

For additional support options available at your area, contact our local offices.

www.minovaglobal.com